

Installation guide S10 Twister Carbon Front Shock Tower #124606 taking the example of a S10 Twister SC




Tools required


LRP WorksTeam Tool 5.5mm Socket #65711
LRP WorksTeam Tools Philipps, large #65751

Please note: Seal the carbon part as explained in the sheet enclosed into the package.

1) Loosen the tagged screws and nuts.

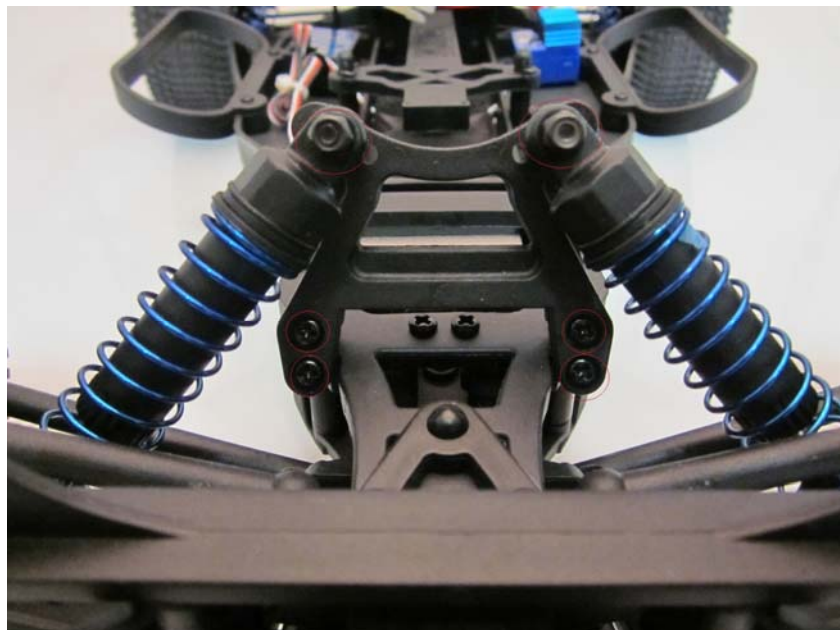


2) Unhinge the shocks.

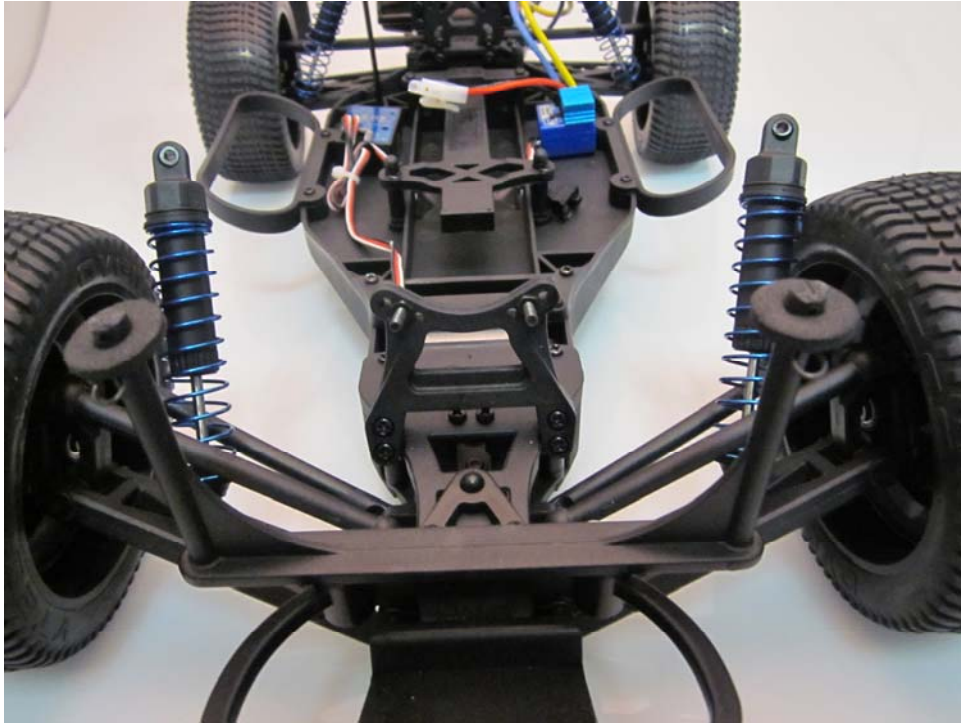

3) Remove the shock tower.



- 4) Fix the shock mounting to the carbon shock tower and then screw the carbon shock tower to the car.

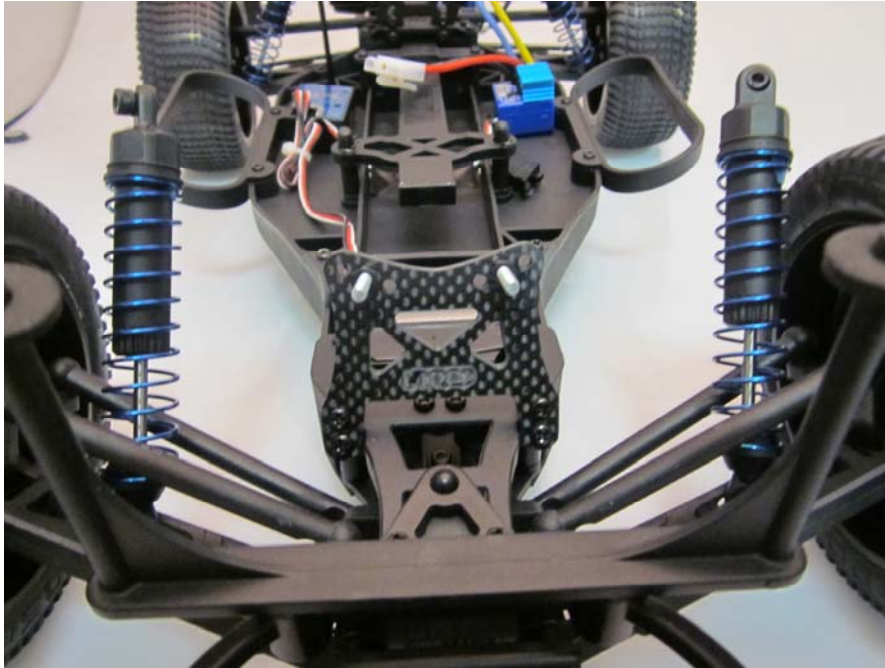

- 5) Fix the shocks to the shock tower.

