

## Installation guide S10 Twister Carbon Rear Shock Tower #124607 taking the example of a S10 Twister SC




### Tools required

LRP WorksTeam Tool 5.5mm Socket #65711  
LRP WorksTeam Tools Philipps, large #65751

**Please note:** Seal the carbon part as explained in the sheet enclosed into the package.



1) Loosen the tagged screws. Then, loosen and unhinge the shocks.

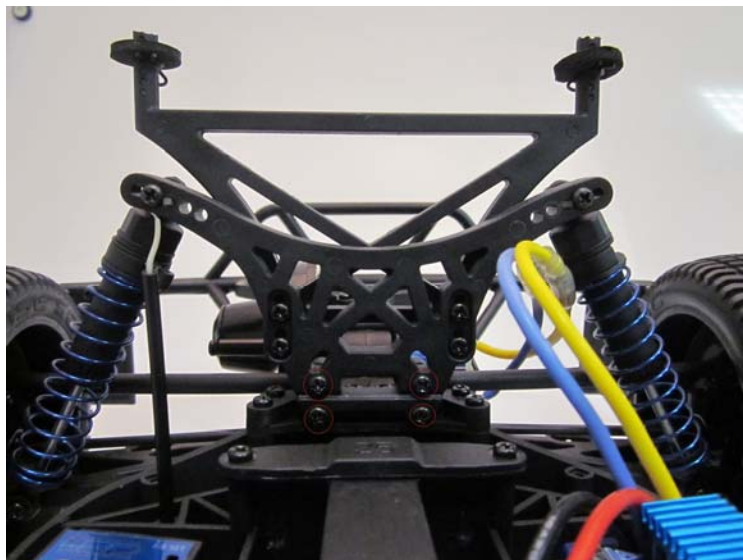

# TECH TIP



WWW.LRP.CC

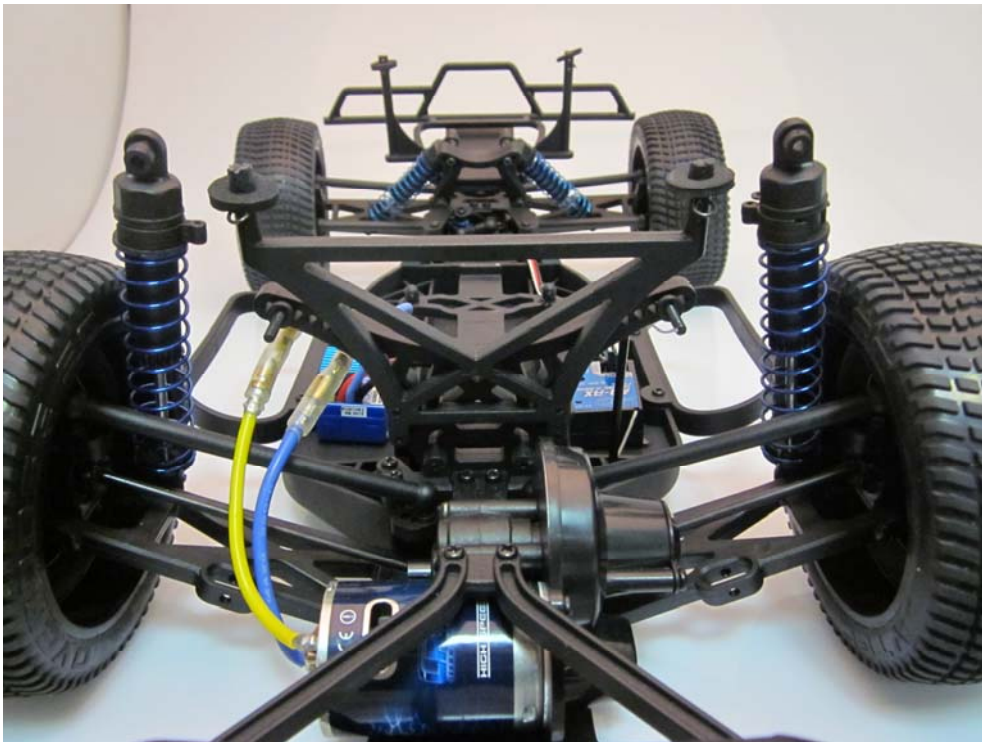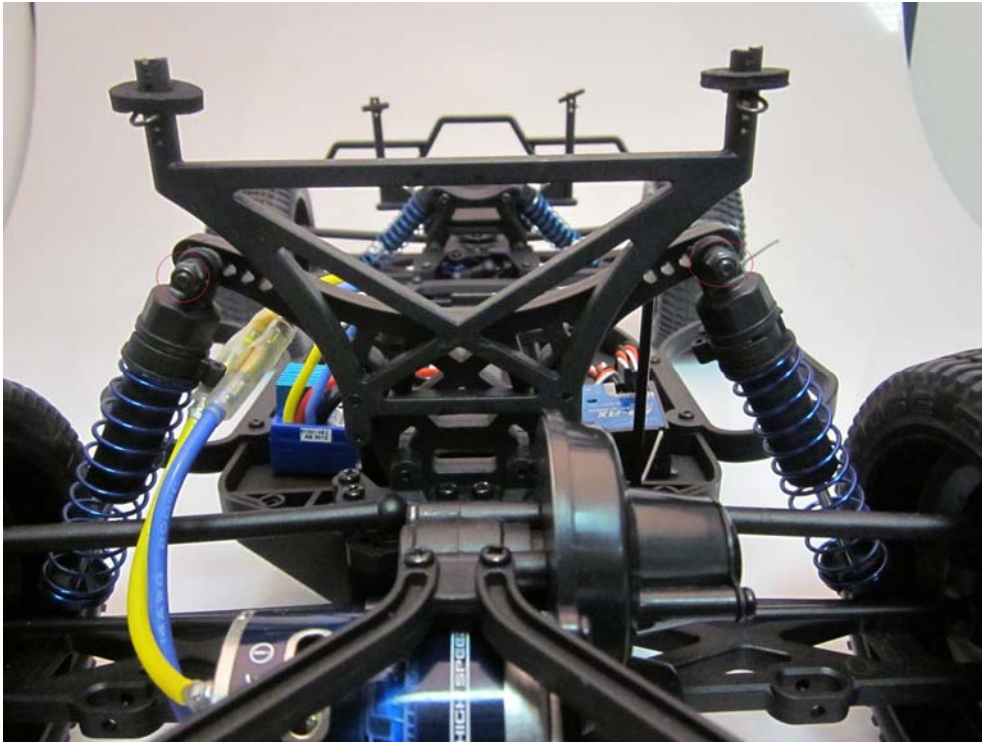

2) Remove the shock tower and fix the body mount to the carbon shock tower.



- 3) Fix the shock mounting to the carbon shock tower. Then, screw the carbon shock tower to the car. In a final step, mount the shocks to the shock tower.

