

## Installation guide S10 Blast Carbon Front Shock Tower #124608 taking the example of a S10 Blast TX 2



### Tools required

- LRP WorksTeam Tool 5.5mm Socket #65711
- LRP WorksTeam Tools Philipps, large #65751
- LRP WorksTeam Tools Philipps, small #65771
- LRP WorksTeam Tools 2.5mm Hex #65661
- LRP WorksTeam Tools 2.0mm Hex #65651

**Please note:** Seal the carbon part as explained in the sheet enclosed into the package.

- 1) Loosen the tagged screws and nuts.




2) Unhinge the shocks.



3) Loosen the body mounts and then fix the body mounts to the carbon shock tower.



- 4) Mount the upper suspension arms to the shock tower. Then, mount the shock tower to the gear box. Make sure the dogbones don't slip out of the differential outdrives.

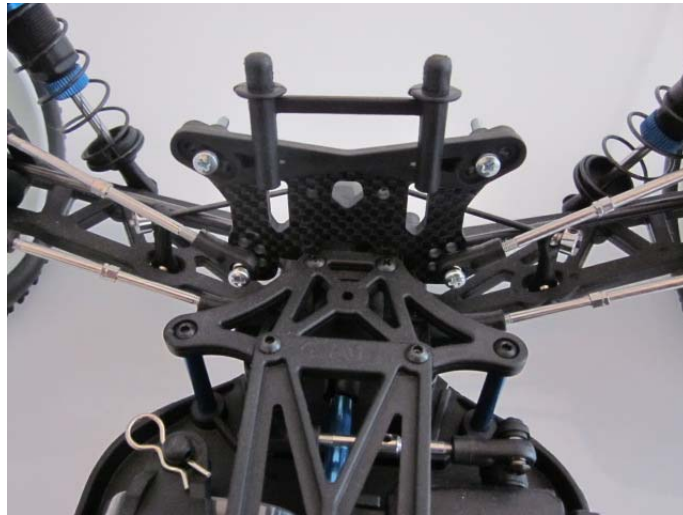

- 5) Fix the shocks to the shock tower.

