

Installation guide S10 Blast Carbon Rear Shock Tower #124609 taking the example of a S10 Blast TX 2




Tools required

- LRP WorksTeam Tool 5.5mm Socket #65711
- LRP WorksTeam Tools Philipps, large #65751
- LRP WorksTeam Tools Philipps, small #65771
- LRP WorksTeam Tools 2.0mm Hex #65651
- LRP WorksTeam Tools 2.5mm Hex #65661

Please note: Seal the carbon part as explained in the sheet enclosed into the package.

1) Loosen the tagged screws and nuts.

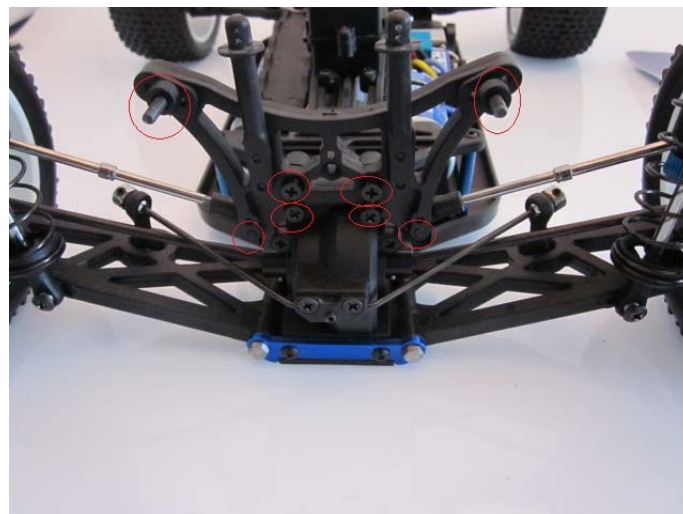



2) Loosen the body mounts and fix them to the carbon shock tower.



- 3) Mount the upper suspension arms to the shock tower. Then, mount the shock tower to the gear box. Make sure the dogbones don't slip out of the differential outdrives.



- 4) Fix the shocks to the shock tower.

