

## Installation guide S10 Blast Rear Upper Carbon Chassis Brace #124610 taking the example of a S10 Blast TX 2




### Tools required

LRP WorksTeam Tools Philipps, small #65771  
LRP WorksTeam Tools 2.0mm Hex # 65651

**Please note:** Seal the carbon part as explained in the sheet enclosed into the package.

1) Loosen the tagged screws and remove the top deck.



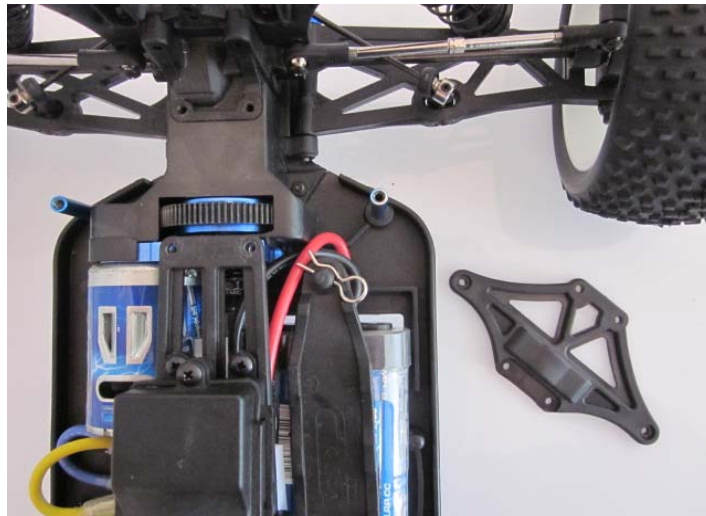

2) Insert the carbon top deck and screw it down.

