

Installation guide S10 Twister Carbon Suspension Arm Hinge Pin Brace Front #124612 taking the example of a S10 Twister Buggy




Tools required

LRP WorksTeam Tools Philipps, large #65751

Please note: Seal the carbon part as explained in the sheet enclosed into the package.

- 1) Loosen the tagged screws. Then, remove bumper and aluminium plate.

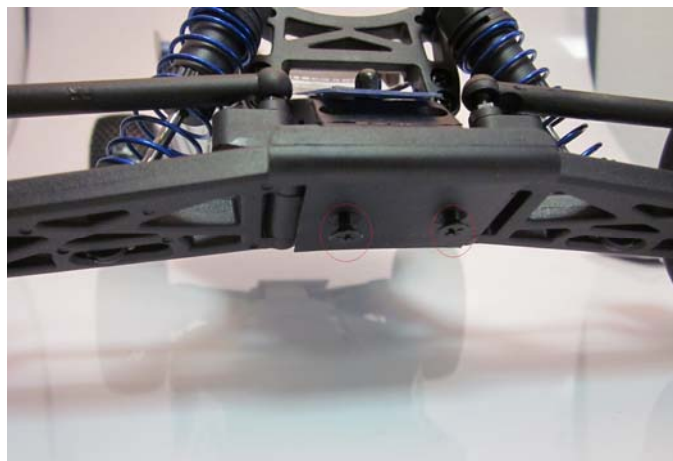



2) Insert the carbon hinge pin brace and screw the bumper down.

