

Installation guide S10 Blast Carbon Suspension Arm Hinge Pin Brace Front #124614 taking the example of a S10 Blast TX 2





Tools required

LRP WorksTeam Tools Philipps, large #65751
LRP WorksTeam Tools 5.5mm Socket #65711


Please note: Seal the carbon part as explained in the sheet enclosed into the package.

- 1) Loosen the tagged screws. Then, remove bumper and aluminium plate.

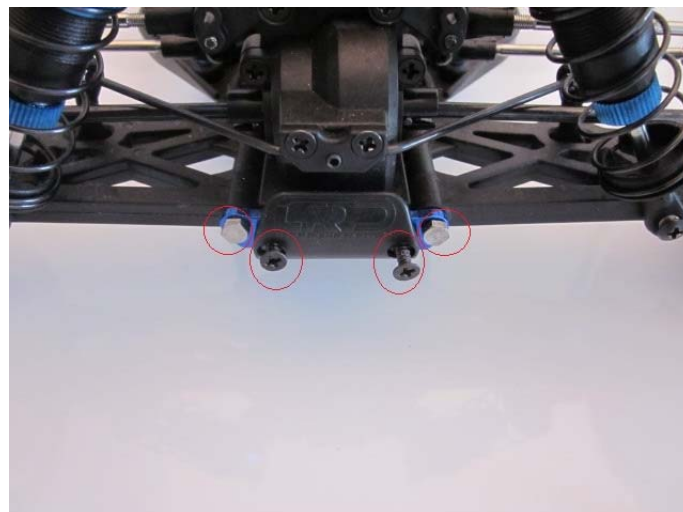

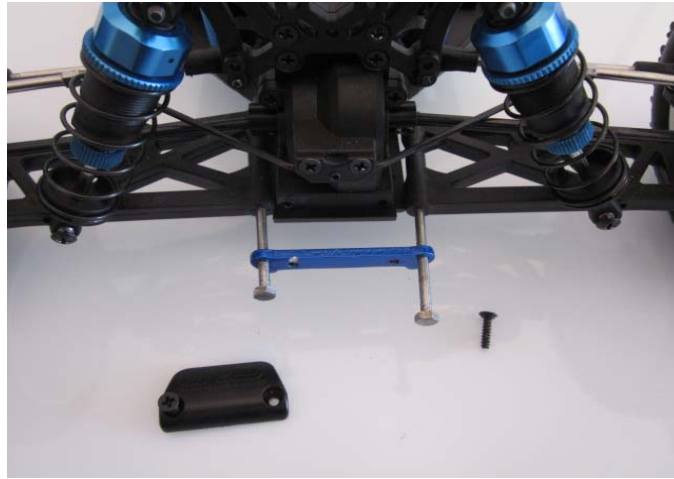

2) Insert the carbon hinge pin brace and screw it down. Make sure the dogbones don't slip out of the differential outdrives.

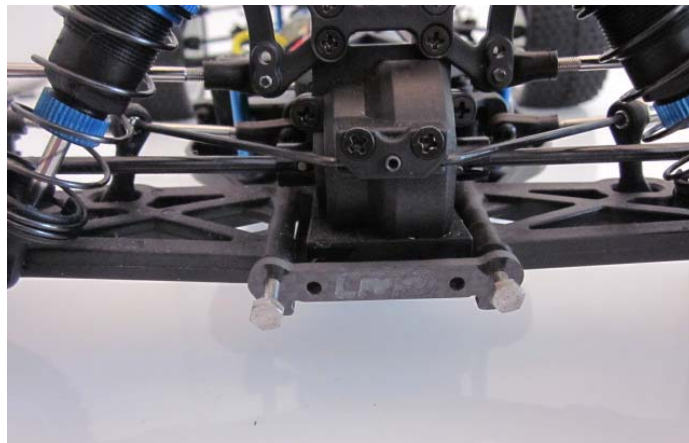

3) In a final step, fix the front bumper.

