

## Installation guide S10 Blast Carbon Suspension Arm Hinge Pin Brace Rear #124615 taking the example of a S10 Blast TX 2




### Tools required

LRP WorksTeam Tools Philipps, small #65771  
LRP WorksTeam Tools 5.5mm Socket #65711

**Please note:** Seal the carbon part as explained in the sheet enclosed into the package.

- 1) Loosen the tagged screws and remove the aluminium plate.

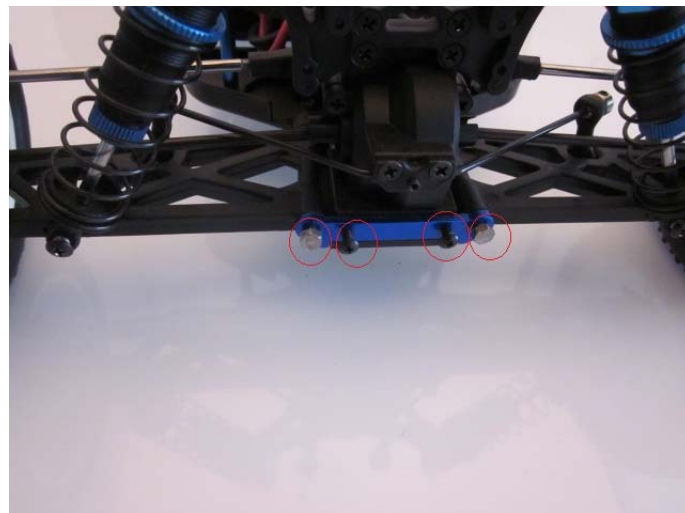

2) Insert the carbon hinge pin brace and screw it down.  
Make sure the dogbones don't slip out of the differential outdrives.

