

**Installation guide S10 Blast One-Piece Upper Carbon  
Chassis Plate #124617**  
taking the example of a S10 Blast TC 2





**Tools required**

LRP WorksTeam Tools Philipps, small #65771  
LRP WorksTeam Tools 2.0mm Hex #65651

**Please note:** Seal the carbon part as explained in the sheet enclosed into the package.

**1)** Loosen the tagged screws. Then, remove receiver box and top deck.

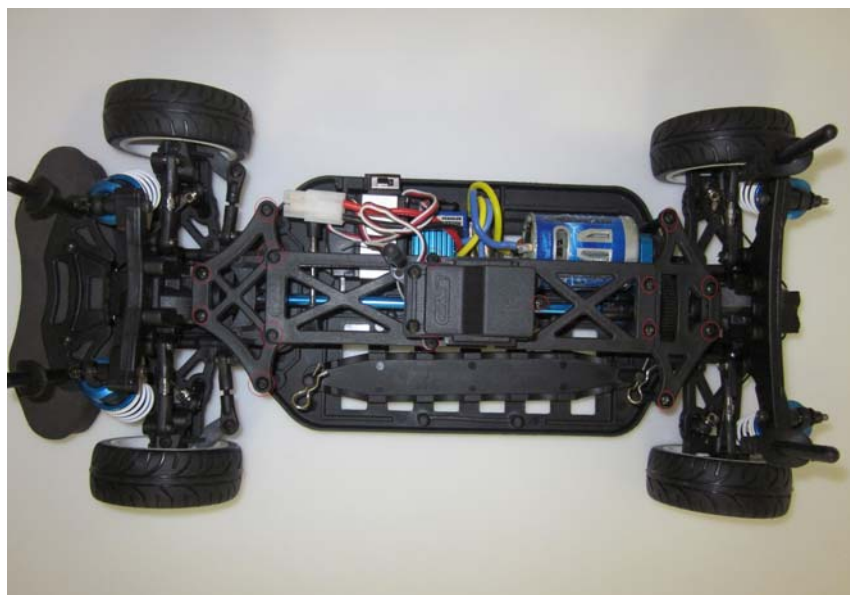

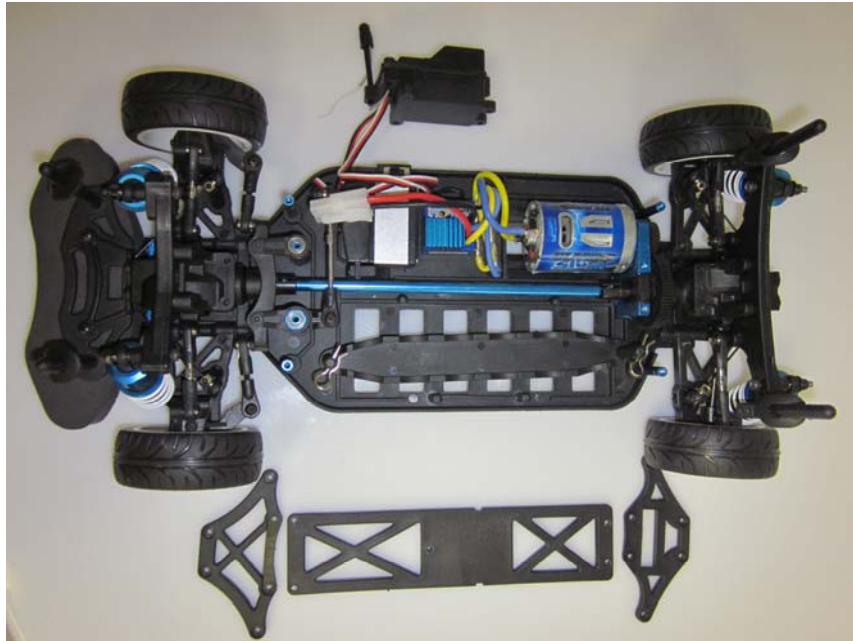

- 2) Fit the carbon top deck and screw it down. Then, mount the receiver box.

